Water Avoider Installation Instructions



① Angle of installation


The angle of installation is shown in Photo ①.

If the fin is too long for your rim size, please apply the angles as shown in Photos ② and ③.

The angle should be 30-45 degrees.
If the fins are still too long, cut off the excess length.




② Left wheel

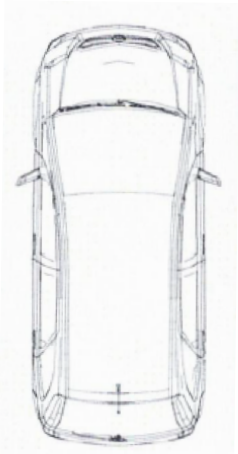



③ Right wheel

FOR V16 AND V27 VALVES

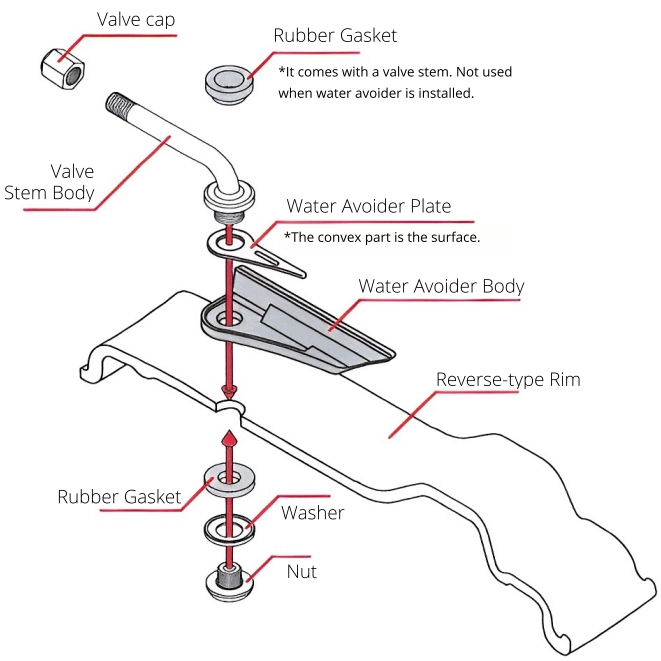

FOR V24 AND V36 VALVES

